

Tabla de Torque SLIM



SLIM-2				
Presión PSI	Presión Mpa	Presión Bar	Torque lb-pie	Torque Nm
1015	7	70	159	215
1305	9	90	204	276
1595	11	110	249	338
1885	13	130	294	399
2176	15	150	340	461
2466	17	170	396	537
2756	19	190	443	600
3046	21	210	489	664
3336	23	230	536	727
3771	26	260	612	829
4061	28	280	659	893
4351	30	300	706	957
4641	32	320	753	1021
4931	34	340	800	1085
5221	36	360	845	1146
5511	38	380	892	1209
5802	40	400	939	1273
6092	42	420	986	1337
6382	44	440	1033	1400
6672	46	460	1075	1457
6962	48	480	1122	1521
7252	50	500	1168	1584

SLIM-4				
Presión PSI	Presión Mpa	Presión Bar	Torque lb- pie	Torque Nm
1015	7	70	362	491
1305	9	90	471	638
1595	11	110	575	780
1885	13	130	680	922
2176	15	150	784	1064
2466	17	170	950	1289
2756	19	190	1062	1440
3046	21	210	1174	1592
3336	23	230	1286	1743
3771	26	260	1473	1997
4061	28	280	1586	2150
4351	30	300	1699	2304
4641	32	320	1813	2458
4931	34	340	1926	2611
5221	36	360	2033	2756
5511	38	380	2146	2909
5802	40	400	2259	3062
6092	42	420	2371	3215
6382	44	440	2484	3368
6672	46	460	2605	3532
6962	48	480	2718	3685
7252	50	500	2832	3839